





NO	Code	Name of Spare Parts		NO	Code	Name of Spare Parts	
1	30021100033	Pan Head Screw M5x20		23	30021400004	Ball Bearing 607ZZ (NMB)	
2	30271200004	Drill Chuck (10mm) (WITH KEY)		24		Armature Assembly	
	30271200021	Drill Chuck (05-10MM) (Keyless)		25	30021200022	Pan Head Tapping Screw ST4.2x19	
3	30120100048	Drive Spindle		26	30215700025	Handle Cover	
4	30021700001	Woodruff Key (3x3.7x10)		27		Stator Assembly	
5	30021600003	Circlip for Hole 32		28	30021100227	Pan Head Tapping Screw ST2.9x9	
6	30021400056	Ball Bearing 6002DDU (NSK)		29	30024500013	Coil Spring	
7	30021600018	Circlip for Shaft 15		30	30030600031	Carbon Brush / Pair	
8	30023300038	Gear Housing		31	30030700018	Brush Holder / Pair	
9	30020500087	Gear 4		32		Nameplate	
10	30021600015	Circlip for Shaft 10		33	30030400004	Inductance 1	
11	30021400132	Needle Bearing HK0808 (INA)		34	30030400005	Inductance 2	
12	30023400036	Gear Housing Cover		35	30016300004	Strain Relief	
13	30021400011	Ball Bearing 608DD (NSK)		36	30030100022	Trigger Switch	
14	30021400130	Needle Bearing HK0608 (INA)		37	30021200036	Pan Head Tapping Screw ST4.2x15	
15	30050900004	Paper Washer (6.4x13.8x1)		38	30030400006	Capacitor0.22 μ F	
16	30020500088	Gear 2		39	30010100011	Cord Guard	
17	30020500089	Gear Shaft 3		40	30029900009	Chuck Wrench	
18	30021000008	Steel Ball 3		41	30030300431	Cord 2x0.75x2.7	
19	30021400039	Ball Bearing 686ZZ (LFB)		42	30030500065	Wire 1	
20	30116000020	Baffle Plate		43	30030500078	Wire 2	
21	30021200043	Pan Head Tapping Screw ST4x37		44	30030500084	Wire 3	
22	30010500001	Bearing Cover (19x21.2x8.6)		45	30223600012	Motor Housing	