





NO	Code	Name of Spare Parts	
1	30021100033	Pan Head Screw M5×20	
2	30171200003	Drill Chuck 10mm	
2A	30171200006	Drill Chuck (Keyless) 10mm	
3	30020100173	Drive Spindle	
4	30021400053	Ball Bearing 6001VV (LFB)	
5	30020500350	Helical Gear (Large)	
6	30021400002	Ball Bearing 606ZZ (LFB)	
7	30021400016	Ball Bearing 608VV (LFB)	
8	30200600373	Stator Assembly	
9	30200400223	Armature With Bearing	
10	30021400007	Ball Bearing 607ZZ (LFB)	
11		Left-half Motor Housing	
12	30030700032	Carbon Brush Holder	
13	30030600166	Carbon Brush	
14	30010100011	Cord Guard	
14A	30110100008	Cord Guard	
15		Capacitor 0.33μF	
16		Cord 2×0.75	
17	30030400172	Inductance 2	
18	30030400171	Inductance 1	
19	30030100299	Switch	
20		Nameplate	
21		Right-half Motor Housing	
22	30021200036	Pan Head Tapping Screw ST4.2×15	
23	30010200005	Rubber Pin (3.5×5)	
24	30110300043	O Ring (5×1.5)	
25	30029900009	Chuck Wrench 10mm	
SET 1	30215400220	Motor Housing (C/W: 11,21)	