





NO	Code	Name of Spare Parts
1	30029900190	Abrasive Disc (Rubber Pad)
2	30023400015	Gear Housing Cover
3	30021100091	Pan Head Screw M5x14 with Spring Washer
4	30021600136	Seal
5	30050900011	Felt Packing (27x20x7)
6	30021400096	Ball Bearing 6202DDU (HS)
7	30024000013	Bearing Cover / Bearing Retainer
8	30021100090	Pan Head Screw M4x10 With Spring Washer
9	30020600020	Spiral Bevel Gear
10	30021700014	Flat Key (3x3x12)
11	30020100005	Drive Spindle
12	30021400080	Ball Bearing 6200ZZ (LFB)
13	30015800016	Auxiliary Handle
14	30023300025	Gear Housing
15	30021200002	Pan Head Tapping Screw ST5x20
16	30021400062	Ball Bearing 6002VV (LFB)
17	30024000171	Bearing Retainer (Thin)
18	30050900010	Felt Packing (24x18x4)
19	30024000172	Bearing Retainer (Thick)
20	30021100080	Cross Recessed Countersunk Head Screw M5x12
21		Armature Assembly
22	30021200026	Pan Head Tapping Screw ST5x63
23		Stator Assembly
24	30016300019	Insulation Washer
25	30021400014	Ball Bearing 608ZZ (NSK)

NO	Code	Name of Spare Parts
25A	30021600189	Wave Spring Washer 16x21x0.4
26	30215400038	Motor Housing
27		Nameplate
28	30030700002	Carbon Brush Holder / Pair
29	30030600020	Carbon Brush / Pair
30	30030800002	Brush Holder Cap / Pair
31		Right-half Handle
32	30010200001	Rubber Pin (4x9.5)
33	30010100004	Cord Guard
34	30016300004	Strain Relief
35	30021200042	Pan Head Tapping Screw ST4x15
36		Cord
37		Capacitor 0.33
38	30030100059	Trigger Switch
39	30030900005	Speed Controller
40	30021200046	Pan Head Tapping Screw ST4.2x20
41		Left-half Handle
42	30021200002	Pan Head Tapping Screw ST5x20
43	30021100237	Hex Socket Head Screw M10x20
44	30021600059	Washer A10
45	30030400015	Terminal Block
861	30050900012	Wool Bonnet
862	30025100013	Wrench (L)
863	30025100025	Hex Wrench (8mm)
Set 1	30005000029	Handle Set (C/W No : 31,41)